



- NOTE:**
1. Use straw bales in drainage ditches only for low flow conditions and when specified on the Erosion Control Plans.
  2. Dimensions without units are millimeters.

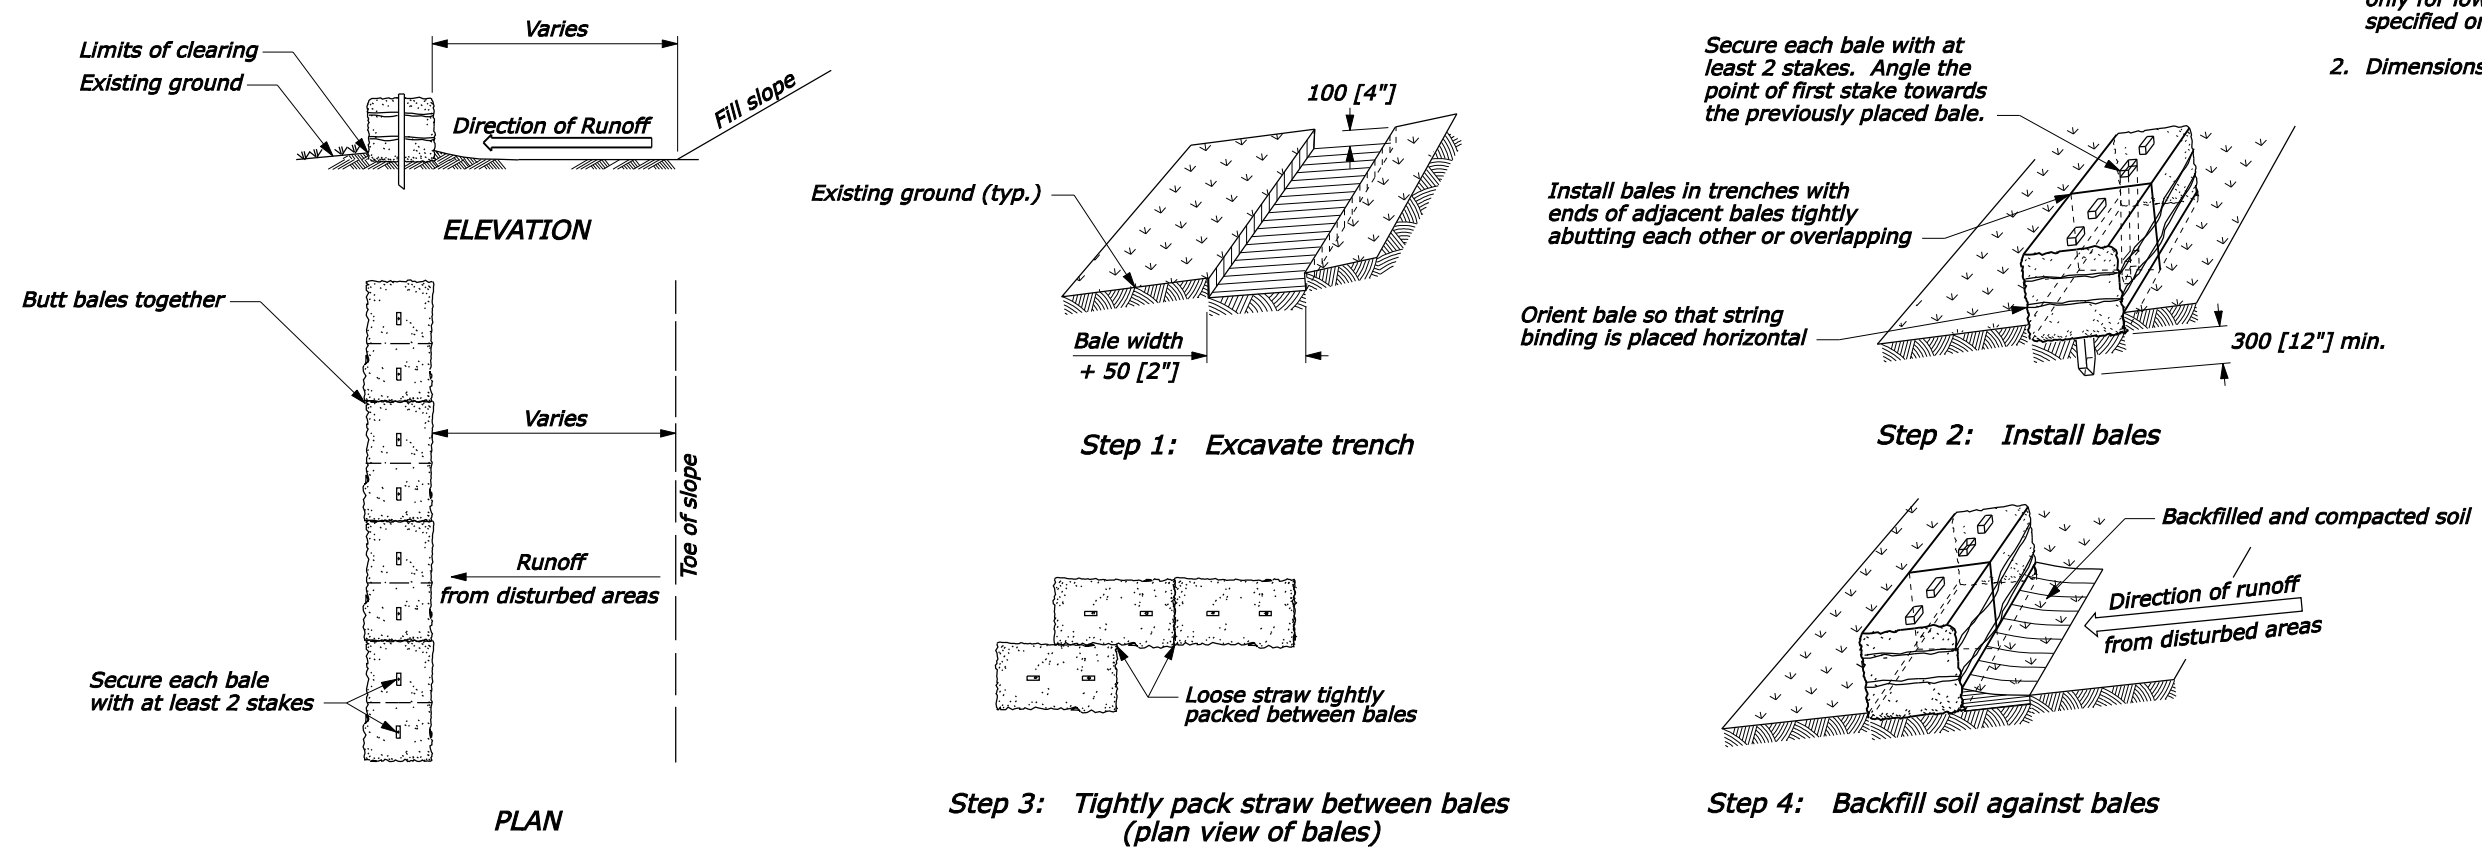

**INSTALLATION OF A STRAW BALE BARRIER AT TOE OF FILL**

**PROPERLY STAKED AND ENTRENCHED STRAW BALES**

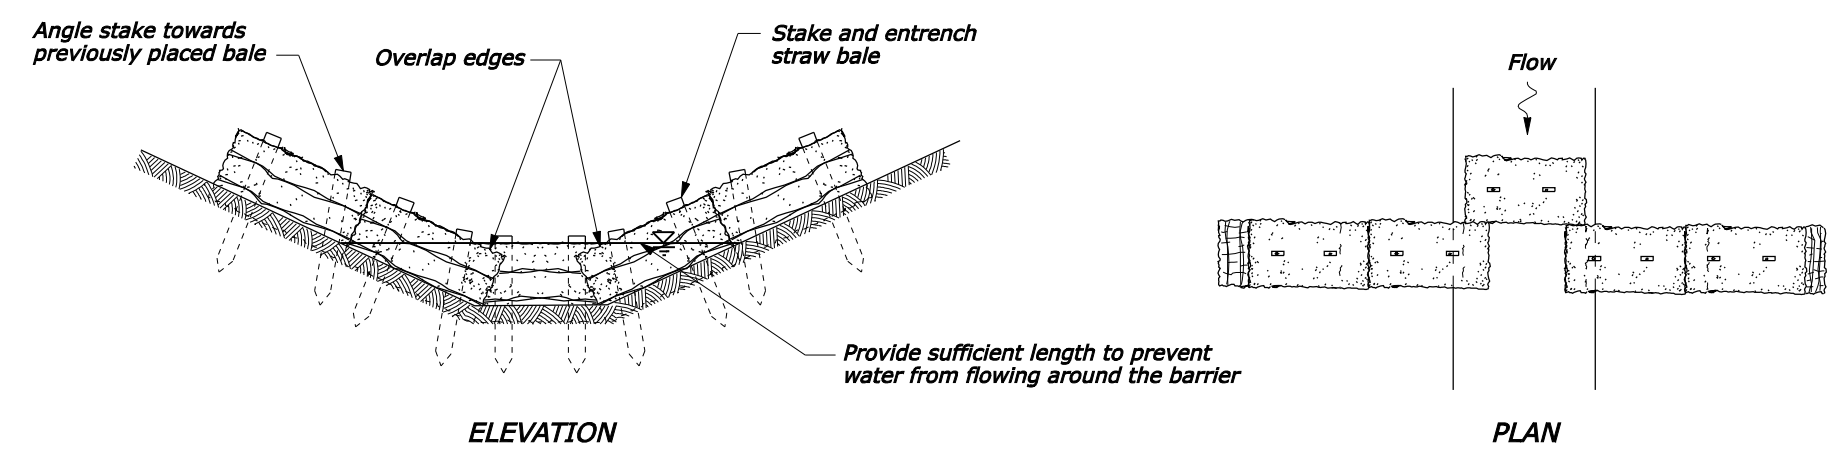

**INSTALLATION OF A STRAW BALE BARRIER IN DITCH**  
See Note 1

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION FEDERAL LANDS HIGHWAY	
DUAL UNIT STANDARD	
<b>STRAW BALES</b>	
STANDARD APPROVED FOR USE 3/1996 REVISED: 6/2005	STANDARD 157-3